


AL-KO QUICK REFERENCE GUIDE

The AL-KO Water Pump range offers versatility and long life performance, when installed correctly. The following is a quick reference guide to installing the HW Series Domestic Electric Water Pumps. Please ensure your AL-KO Water Pump is installed correctly to avoid any performance problems or loss of warranty.

AL-KO Domestic Electric Water Pumps are **Water Resistant** not Water Proof. If positioned outside, your Water Pump **MUST** be installed with a Water Pump Cover. AL-KO Water Pump covers can be purchased at your AL-KO Water Pump distributor.

CORRECT INSTALLATION PROCEDURE.

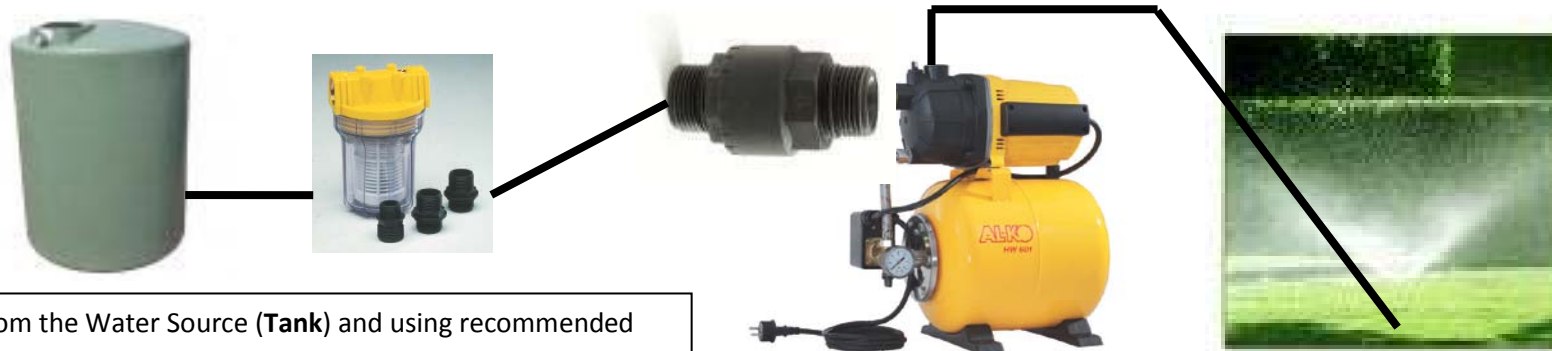

From the Water Source (**Tank**) and using recommended 25mm hose and couplings, secure hose to gate valve outlet on water tank, then other end of hose to an AL-KO **Pre-Filter** or suitable Pre-Filter. From the Pre-Filter, secure hose and then secure to **Non Return Valve**. NRV is secured tightly to inlet of Water Pump, making sure water flow indicator is correct for direction of water flow.

Using correct couplings, attach 25mm hose to coupling in outlet of Water Pump and then run hose to desired water outlet position. For HW series pumps, air pressure **MUST** remain at **20Psi**. Please check regularly by removing (unscrew) black disc from rear of tank, and using a normal air pressure gauge and pump, check air pressure and inflate to 20Psi if required.

AL-KO Water Pumps use pressure switches to sense water pressure in outlet line. Once pressure in outlet line drops, the water pump will activate. The water pump will switch off once full water pressure is returned to line. This could take between 10 – 30 seconds depending on length of hose or pipe from Water Pump to outlet, or the size of the hose or pipe being used. **DO NOT adjust pressure switch settings.**

FOR MORE INFORMATION CALL AL-KO ON 1800 035 603 OR VISIT www.alko.com.au